

GUÍA DE REFERENCIA RÁPIDA

Cuisinart®

Licuada de mano inalámbrica
Smart Stick®




PIEZAS Y CARACTERÍSTICAS

BLOQUE-MOTOR (EMPUÑADURA)

¡Inalámbrico! Contiene dos baterías recargables de iones de litio de 4.0 V y cuenta con un botón de encendido al alcance de los dedos. Diseñado en forma de utensilio para mezclar, para máxima comodidad y control.

- Botón de bloqueo de seguridad/desbloqueo. Debe presionarse para que el motor se encienda, lo que evita encender la unidad por accidente.
- Indicadores del nivel de carga.
Rojo (nivel bajo): menos del 25 %.
Anaranjado (nivel medio): 25 % a 75 %.
Verde (nivel alto): 75 % a 100 %.
- Indicador de velocidad. Cinco barras se iluminan para indicar el nivel de velocidad.
- Control de velocidad. Deslice el botón hacia la izquierda o la derecha para elegir/ajustar la velocidad.
- Botón de encendido. Manténgalo oprimido antes o después de presionar el botón de desbloqueo. **NOTA:** el aparato se apaga y se bloquea automáticamente al soltar el botón de encendido.

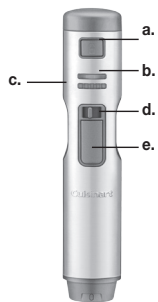

¡IMPORTANTE!

No lo tire. Lea esta información antes de usar su nueva licuadora de mano inalámbrica Smart Stick® por primera vez. Guarde esta información para futura referencia. Estos útiles consejos complementan el manual de instrucciones. Para lograr un rendimiento óptimo y una operación segura, lea el manual de instrucciones.

PG-37746-ESP

INTRODUCCIÓN

Estamos orgullosos de presentar otro producto revolucionario de Cuisinart: su nueva licuadora de mano inalámbrica Smart Stick®. Sin cable que le haga estorbo, puede licuar o batir donde quiera. Y esto no es todo...

BLOQUEO DE SEGURIDAD

Para encender el motor, mantenga oprimido el botón de desbloqueo y presione el botón de encendido. Una vez encendido el motor, puede soltar el botón de desbloqueo. Nota: también puede hacer lo contrario, oprimiendo primero el botón de encendido y luego el botón de desbloqueo. No presione el botón de encendido durante más de 2 minutos seguidos. Para apagar, suelte el botón de encendido.

CARGA Y VIDA ÚTIL DE LAS BATERÍAS

Las baterías de su licuadora de mano inalámbrica Smart Stick® no han sido precargadas en la fábrica. Antes del primer uso, las deberá cargar hasta que la luz de carga VERDE se encienda.

Una carga completa proporciona una autonomía de aproximadamente 20 minutos, dependiendo del esfuerzo que debe hacer la unidad. Cargar el aparato toma aproximadamente 2-2.5 horas. Indicadores del nivel de carga:

Verde: nivel de carga entre el 100 % y el 75 %. **Anaranjado:** nivel de carga entre el 75 % y el 25 %. **Rojo:** nivel de carga inferior al 25 %; póngalo a cargar pronto.

Nota: no deje el aparato descargado por un tiempo prolongado, ya que esto puede afectar la vida de las baterías recargables.

QUICK REFERENCE GUIDE

Cuisinart®

Cordless Smart Stick® Hand Blender




FEATURES AND COMPONENTS

POWER HANDLE

No cord! Operates on two rechargeable 4.0 volt lithium-ion batteries, with power button within easy reach. Shaped like a stirring utensil for comfortable control.

- Auto Lock/Unlock Button must be pressed to unlock before power handle will operate.
- Battery Indicator Lights.
Red/Low: Less than 25%.
Orange/Normal Use Range: 25-75%.
Green/High: 75-100%.
- Blue Speed Indicators. Five bars light up to indicate low to high speed selection.
- Speed Control. Push button to left or right to select speed.
- Power On Button. Press and hold before or right after pushing Auto Lock/Unlock switch. **NOTE:** Operation stops instantly and locks when Power button is released.

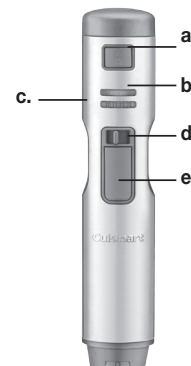

IMPORTANT!

Do not discard. Read before operating your new Smart Stick® Cordless Hand Blender. Keep for further reference. These helpful hints are intended to be a supplement to the Instruction Booklet. In order to ensure proper operation and optimum performance, please read the entire Instruction Booklet.

PG-37746-ESP

INTRODUCTION

Introducing another first from Cuisinart. Your new Cordless Smart Stick® Hand Blender. With no cord to get in the way, you can blend and whisk right in a beaker at the stove. Want to do even more?

LOCK & UNLOCK FEATURE

Press and hold the Auto Lock/Unlock button and press and Power On button to turn motor on. Once motor is on, you can release the Auto Lock/Unlock button. You can also press the Power button first, holding it down as you press the Auto Lock/Unlock button to turn motor on. Do not hold Power button down for more than 2 minutes at a time. To turn the blender motor off, release the Power On button.

CHARGING YOUR BLENDER/BATTERY LIFE

The batteries in your Cuisinart® Cordless Smart Stick® Hand Blender and Knife have not been fully charged. Before the first use of this appliance, the batteries must be charged until the GREEN battery indicator light illuminates.

With a full charge, your stick blender will run for approximately 20 minutes, depending on load. Your stick blender will be fully charged in approximately 2-2.5 hours. Battery Life Indicator Lights:

Green: When the unit displays a green power light, you are between 100% and 75% of battery power **Orange:** When illuminated in Orange, you are between 75% and 25% of battery power. When Red, you are at less than 25% and will need to charge soon.

Note: Do not leave your stick blender uncharged for an extended period of time, as it will affect the life of the rechargeable battery.